

Multi-Twist Mini Ball Machine™

INSTRUCTIONS



Congratulations on your investment in the most portable of the high-quality ball machines in the world that works equally well with tennis balls, transition tennis balls, AND pickleballs! The **MULTI-TWIST MINI BALL MACHINE™** works independently like any ball machine OR with our patent pending Infinity Play System™, a continuous play netting retrieval system made specifically for this machine!



BALL FEED

The ball feed rate will be 1 ball every 3.5 seconds.

BATTERY OPERATION

The battery compartment is on the bottom of the machine. Gently push back the two latches to open the cover. Place six “D” batteries in the compartment as shown on the bottom of the compartment. Replace the battery cover.

Battery life depends on the type of batteries that you use. New alkaline batteries typically last 8-10 hours before needing to be replaced. You can also use rechargeable (Ni-MH 1.2V) batteries. Rechargeable batteries will provide up to 2 hours of playing time and can be recharged overnight with a universal battery charger. A universal battery charge can be acquired online or wherever rechargeable batteries are sold.

ADJUSTING THE BALL TOSS

Adjust the setting of the ball toss only when the machine is OFF. Pull on the adjustment ring on the bottom of the machine and move it towards the slot at the “HI” position for a higher, deeper throw or toward the “LO” for a shorter throw.

There are 5 possible positions. You will find that the lighter pickleballs work better on the “LO” setting, while you may prefer to set tennis balls at the “HI” position.

IMPORTANT: Before adjusting the ball throw, shoot one ball first and then turn the machine “OFF” immediately after the ball is thrown.

To prevent stress on the internal motor spring, **DO NOT** allow the Multi-Twist Mini Ball Machine™ to operate empty, without balls on the track.

Multi-Twist Mini Ball Machine™

INSTRUCTIONS

POSITIONING TIPS

For groundstroke practice, place the Multi-Twist Mini Ball Machine™ near the net and aimed towards the baseline, or on the opposite side of the net from the player.

For volley practice, position the machine on the opposite side of the net from the player.

WARNING: DO NOT STAND NEAR THE BALL EJECTION POINT.
INJURY MAY OCCUR.

SET UP WITH THE INFINITY PLAY SYSTEM

Review the Infinity Play System™ Instructions to learn how to assemble the Multi-Twist-Mini Ball Machine™ with Infinity Play System™ net. You can view the instructions online at OnCourtOffCourt.com.



For service or questions, please contact OnCourt OffCourt
toll free at 888-366-4711 or 214-823-3078.



Copyright © 2022 OnCourt OffCourt. All rights reserved.